



ULTIMATE SERIES:

Procedure for: Filling/Clearing Air Pockets

- 1. When filling the Ultimate series Electro-Lube with a standard grease gun, open the pressure relief valve while filling to eliminate excess air.**
- 2. Turn on any DIP switch setting; the Ultimate unit should dispense about 1 inch of lubricant per cycle.**
- 3. If no lubricant is dispensed; the issue may be an air pocket. With a 7/32 Allen wrench, gently loosen the set screw and engage any DIP switch setting. You may notice the air leave and unit resume dispensing grease.**
- 4. If no lubricant dispenses at this point, remove the set screw until the ball and spring are revealed.**
- 5. Clean the ball and screw and the cavity, then reinsert the ball, spring and set screw and engage DIP switch settings once again. Unit should resume operation.**

www.atselectrolube.com